



7kN BOTTOM PLATE FIXING

THROUGH BOLT M12 x 135mm

Hot Dip Galvanised
Pack Size: 50pcs

BONUS IN EACH TUB

Includes
Washer
& SDS Drill Bit



SCAN THE CODE



FOR MORE INFO


Installation Guide



Step 1
Using the correct masonry drill bit, drill a hole to the required embedment +10mm. Ensure that the minimum edge distance of 55mm is adhered to.



Step 2
Clean dust and debris from hole.

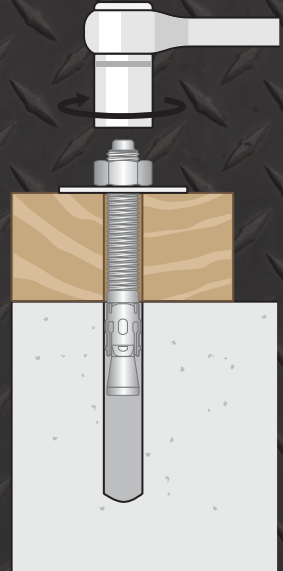

Step 3
Screw in anchor using torque wrench or impact wrench until head is firmly secured against washer.
DO NOT OVER-TIGHTEN.

