



makes your job easier

2025


MASONRY FIXINGS




Hex Head Screw Bolt

Mechanical Galvanised

PURCHASE PER PACK

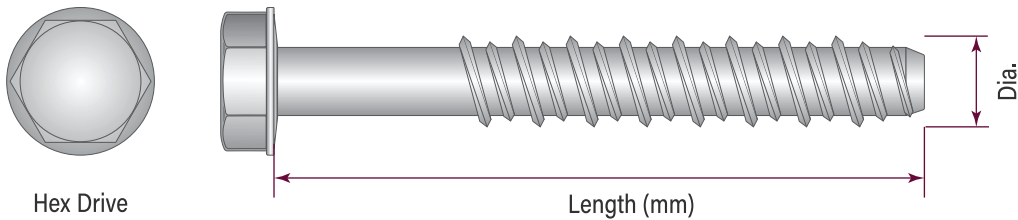


Mechanical Galvanised - Outdoor Use			
Diameter	Length (mm)	Product Code	Pcs / Pack
M5	50	SBGXM550-100	100
M6	30	SBGXM630-100	100
	50	SBGXM650-100	
	75	SBGXM675-100	
	100	SBGXM6100-100	
	120	SBGXM6120-100	
M8	50	SBGXM850-50	50
	60	SBGXM860-50	
	75	SBGXM875-50	
	80	SBGXM880-50	
	100	SBGXM8100-50	
	130	SBGXM8130-50	
M10	140	SBGXM8140-50	50
	60	SBGXM1060-50	
	75	SBGXM1075-50	
	100	SBGXM10100-50	
M12	120	SBGXM10120-50	25
	75	SBGXM1275-25	
	100	SBGXM12100-25	
M16	120	SBGXM12120-25	25
	150	SBGXM12150-25	
	100	SBGXM16100-25	
M16	150	SBGXM16150-25	25

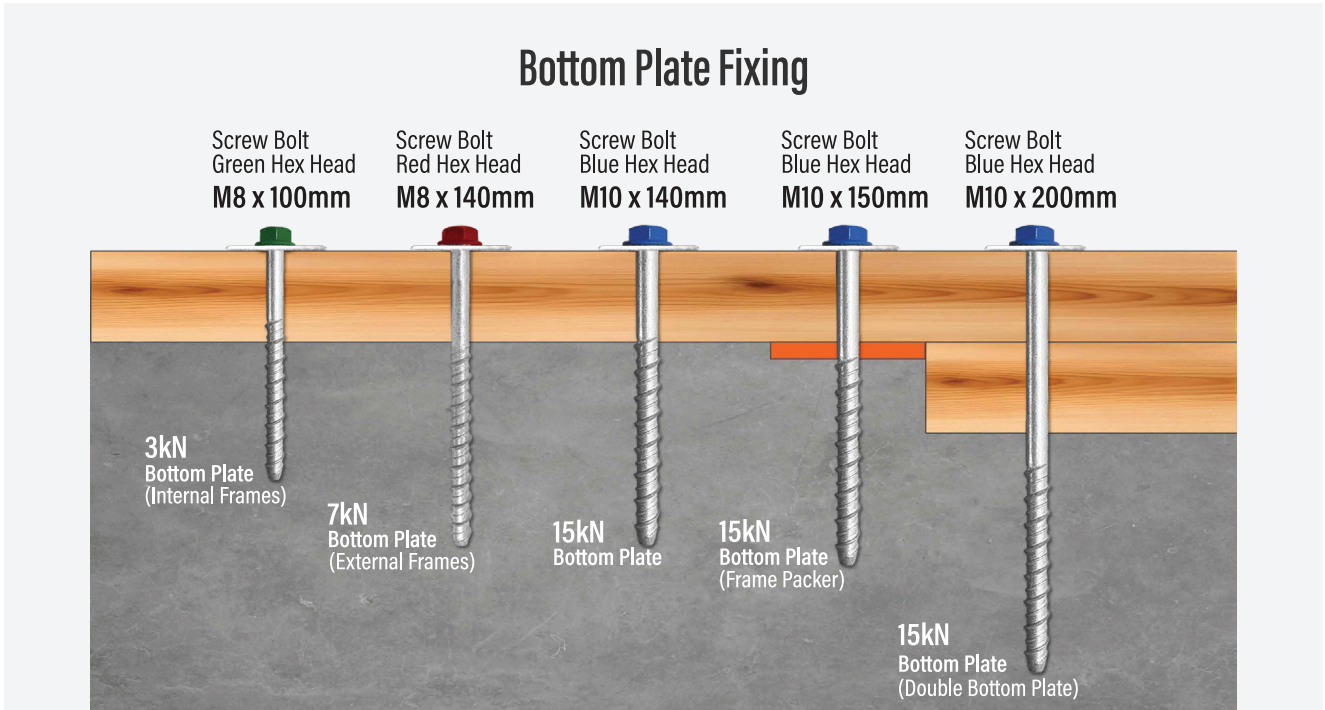

3kN Bottom Plate Fixing (Internal Frames)

Mechanical Galvanised

PURCHASE PER PACK

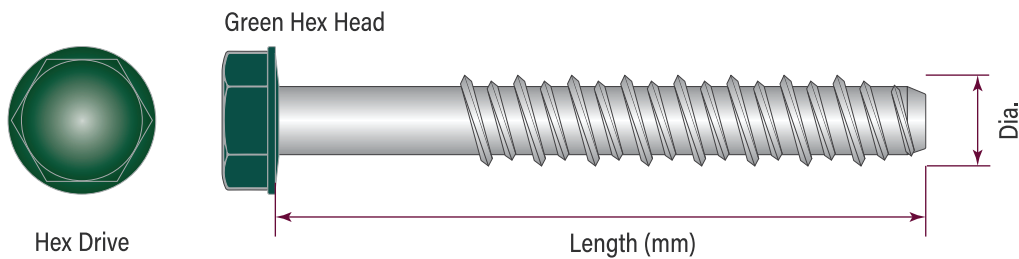


Mechanical Galvanised - Outdoor Use

Diameter	Length (mm)	Product Code	Pcs / Pack
M8 / 3kN	100	SBGXM8100-50	50

7kN Bottom Plate Fixing (External Frames)

Mechanical Galvanised

PURCHASE PER PACK

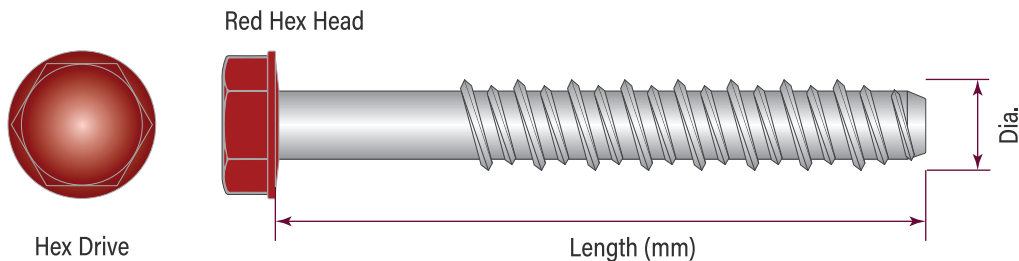


Mechanical Galvanised - Outdoor Use

Diameter	Length (mm)	Product Code	Pcs / Pack
M8 / 7kN	140	SBGXM8140-50	50

15kN Bottom Plate Fixing

Mechanical Galvanised

PURCHASE PER PACK

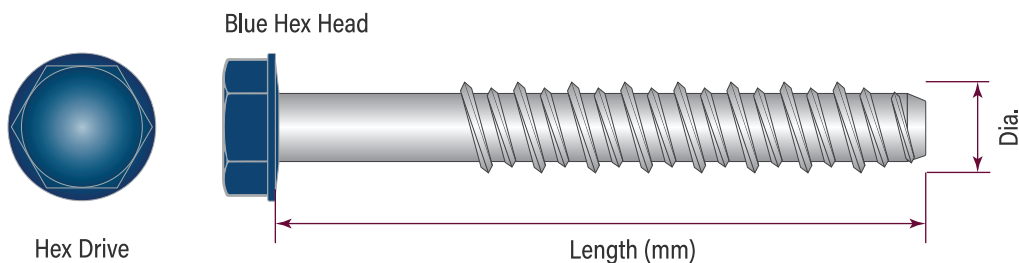

Mechanical Galvanised - Outdoor Use


Diameter	Length (mm)	Product Code	Application	Pcs / Pack
M10 / 15kN	140	SBGXM10140-50	15kN bottom plate fixing	50
	150	SBGXM10150-25	15kN bottom plate fixing (Frame packer)	25
	200	SBGXM10200-25	15kN bottom plate fixing (Double bottom plate)	25

15kN Bottom Plate Fixing

Mechanical Galvanised

Tub / Washer Pack

PURCHASE PER TUB

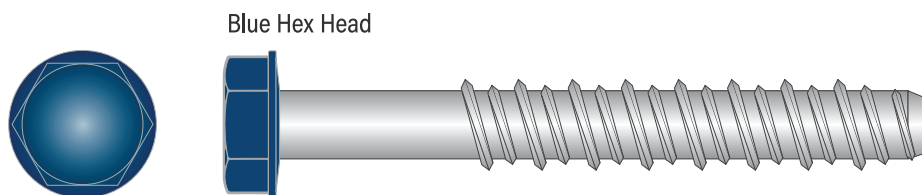

Blue Hex Head

**MECHANICAL
GALVANISED**

Mechanical Galvanised - Outdoor Use

Diameter	Length (mm)	Product Code	Application	Pcs / Tub
M10 / 15kN	140	SBGXM10140TUB-50	15kN bottom plate fixing	50
	150	SBGXM10150TUB-50	15kN bottom plate fixing (Frame packer)	50

Includes in each tub




50pcs
Washer



1pc
Socket driver bit




1pc
Drill bit

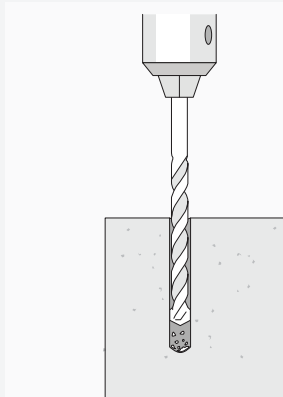


Step 1

Using the correct masonry drill bit, drill a hole to the required embedment +10mm. Ensure that the minimum edge distance of 55mm is adhered too.

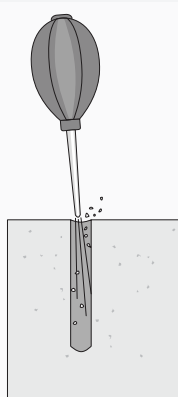

Step 2

Clean dust and debris from hole.

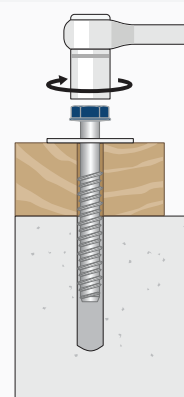

Step 3


Screw in anchor using torque wrench or impact wrench until flange head is firmly secured against washer. **DO NOT OVER-TIGHTEN.**

15kN Bottom Plate Fixing

Mechanical Galvanised

Tub / Washer Pack

PURCHASE PER TUB

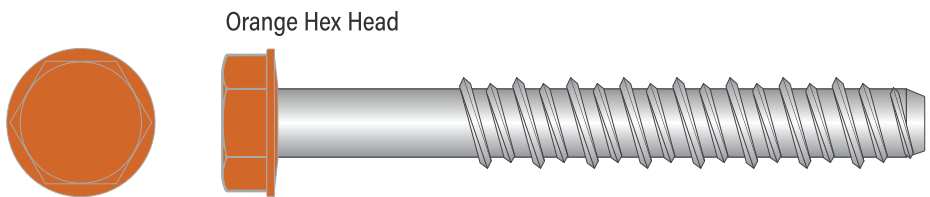

Mechanical Galvanised - Outdoor Use				
Diameter	Length (mm)	Product Code	Application	Pcs / Tub
M10 / 15kN	155	SBGXM10155TUB-50	15kN bottom plate fixing (Insulated slab)	50

Includes in each tub



50pcs
Washer




1pc
Socket driver bit




1pc
Drill bit




ECKO M10 x 155mm Screw Bolt (orange head) 90mm bottom plate anchor solution is BRANZ tested (ST18050-01-02). For use with Firth's RibRaft HotEdge® insulation solution for concrete foundations.
**Please refer to www.firth.co.nz for installation guide.*

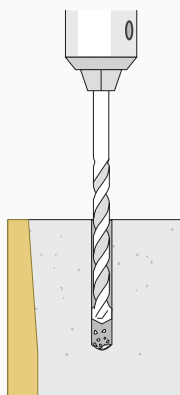

Step 1
Using a 10mm masonry drill bit, drill a hole to the required embedment + 10mm. Ensure that the minimum edge distance (from outside of insulation) of 58mm is adhered too.

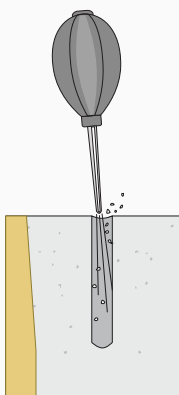

Step 2
Clean dust and debris from hole.

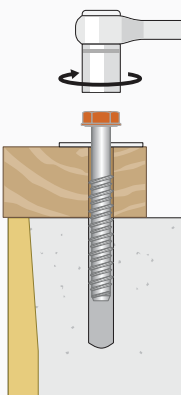

Step 3
Screw in anchor using torque wrench or impact wrench until flange head is firmly secured against washer. **DO NOT OVER-TIGHTEN.**


Countersunk Head Screw Bolt

Mechanical Galvanised

PURCHASE PER PACK



TX Drive

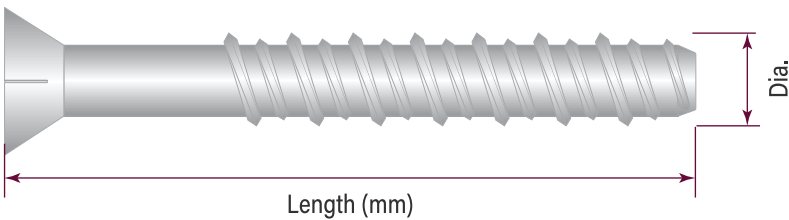

Mechanical Galvanised - Outdoor Use				
Diameter	Length (mm)	Product Code	Drive	Pcs / Pack
M6	50	SBGCM650-100	T30 Drive	100
	75	SBGCM675-100		
	100	SBGCM6100-100		
M8	60	SBGCM860-50	T40 Drive	50
	75	SBGCM875-50		
	100	SBGCM8100-50		
	130	SBGCM8130-50		
M10	75	SBGCM1075-50	T50 Drive	50
	100	SBGCM10100-50		
M12	100	SBGCM12100-25	T50 Drive	25
	150	SBGCM12150-25		


Countersunk Head Masonry Screws

Mechanical Galvanised

PURCHASE PER **PACK**



TX Drive

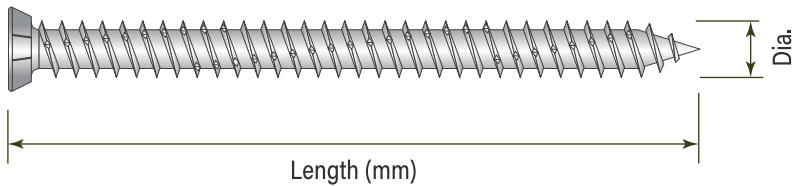

Mechanical Galvanised - Outdoor Use					
Size (mm)	Length (mm)	Drilled Hole (mm)	Product Code	Drive	Pcs / Pack
7.5	62	6	CONFIX62-100	T30 Drive	100
	82		CONFIX82-100		
	102		CONFIX102-100		

Includes in each pack



1pc
Driver bit




1pc
Drill bit



Through Bolt

Hot Dip Galvanised

PURCHASE PER PACK

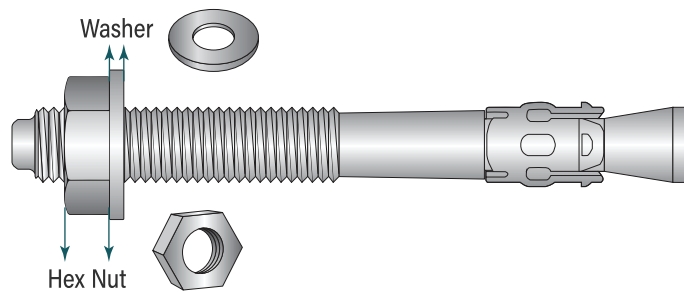


Hot Dip Galvanised - Outdoor Use			
Diameter	Length (mm)	Product Code	Pcs / Pack
M8	80	TBGM880-100	100
	100	TBGM8100-100	
	120	TBGM8120-100	
M10	65	TBGM1065-50	50
	90	TBGM1090-50	
	120	TBGM10120-50	
M12	80	TBGM1280-25	25
	100	TBGM12100-25	
	120	TBGM12120-25	
	135	TBGM12135-25	
	180	TBGM12180-25	
M16	105	TBGM16105-25	25
	125	TBGM16125-25	
	140	TBGM16140-25	
	180	TBGM16180-25	

Through Bolt

316 Stainless Steel

PURCHASE PER PACK

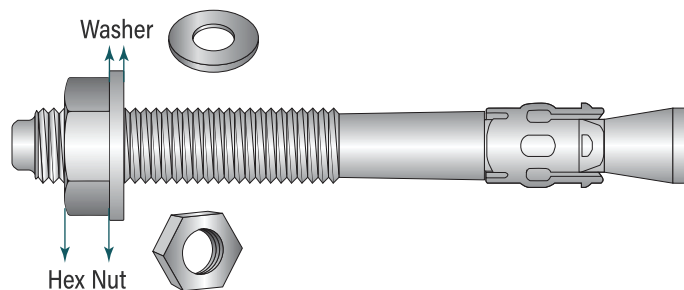


316 Stainless Steel - Outdoor & Sea Spray Zone Use			
Diameter	Length (mm)	Product Code	Pcs / Pack
M8	80	TBSS316M880-100	100
M10	90	TBSS316M1090-50	50
	120	TBSS316M10120-50	
M12	80	TBSS316M1280-25	25
	100	TBSS316M12100-25	
	120	TBSS316M12120-25	
	135	TBSS316M12135-25	
M16	180	TBSS316M12180-25	25
	105	TBSS316M16105-25	

Through Bolt

Hot Dip Galvanised

Tub / Washer Pack

PURCHASE PER TUB

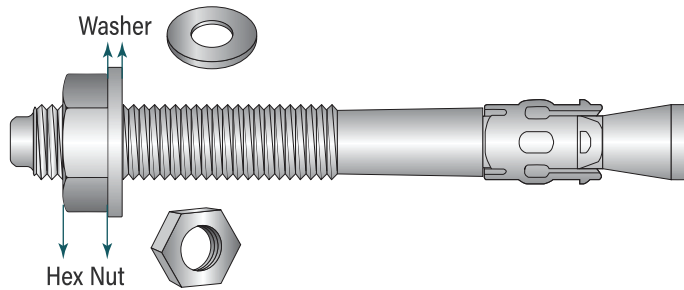

Hot Dip Galvanised - Outdoor Use

Diameter	Length (mm)	Product Code	Pcs / Tub
M12 / 7kN	135	TBGM12135TUB-25	25
		TBGM12135TUB-50	

Includes in each tub



50pcs
Washer





1pc
SDS Drill bit




Bottom Plate Fixing

Through Bolt
M12 x 135mm

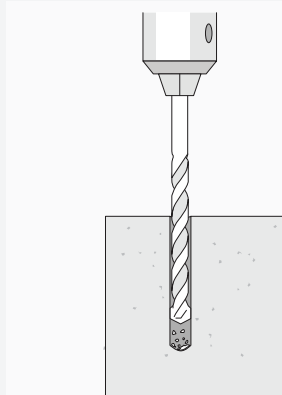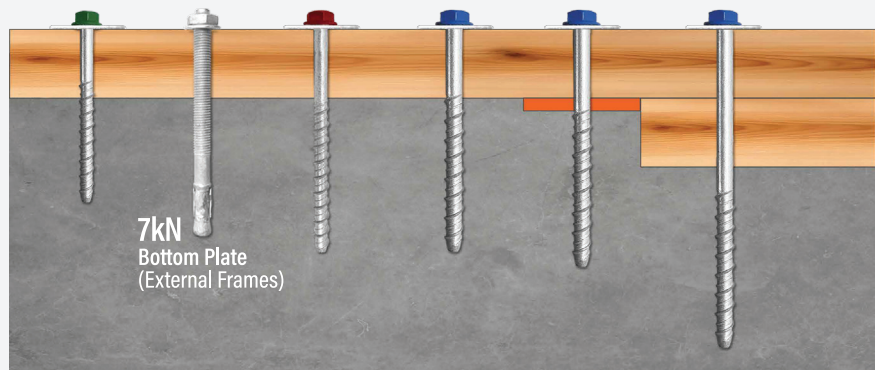


Step 1

Using the correct masonry drill bit, drill a hole to the required embedment +10mm. Ensure that the minimum edge distance of 55mm is adhered too.

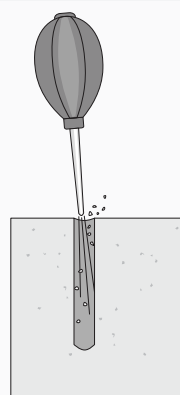

Step 2

Clean dust and debris from hole.

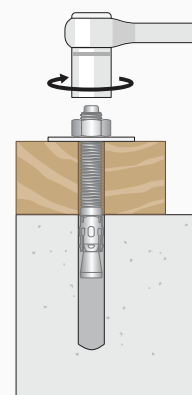

Step 3

Screw in anchor using torque wrench or impact wrench until flange head is firmly secured against washer. **DO NOT OVER-TIGHTEN.**